Instructions for wear checks of play equipment

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Playground..

Date of installation ....

Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment equipment at least once a year.

Intervals for maintenance work and checks generally depend on

- location
- usage
- frequency of use
- possible vandalism

For more details see also "General instructions for maintenance of playgrounds".

Small Acrobat Rig
Order No. L7.66000
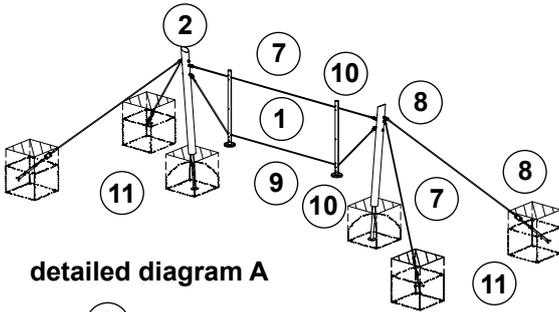
detailed diagram A
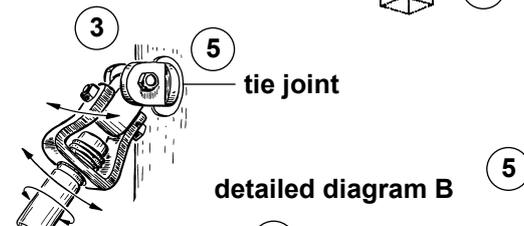
tie joint

detailed diagram B
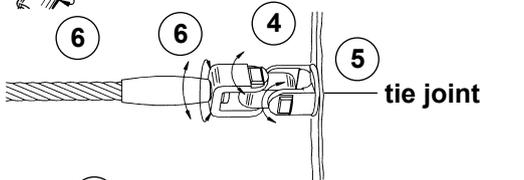
tie joint

detailed diagram C

re-tension here

En-EN   26.01.2022

Wooden parts

1. Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks. ☐

2. Recommendation: apply paraffin wax to the upper end grain areas once a year, please refer to order No. 0.90100, 1 litre. ☐

Joints

3. Check that the upper ball bearings move smoothly **(see detailed diagram A).** ☐

4. Check that the lower swivel within the universal joint moves smoothly (**see diagram D)**, apply small amount of grease if required. ☐

5. Check connection to wood, the tie joint must fit closely **(see detailed diagram A + B).** ☐

6. Check that cable connections move smoothly, oil them at each inspection. ☐

Ropes

7. Check for wear & tear, if the steel reinforcement is damaged, it is imperative it be replaced. ☐

8. Check that the upper connections of the tensioning ropes are tight, the ropes must be taut – retighten if necessary **(see detailed diagram B)** shorten the chain if necessary ☐

Pendulum seats

9. Replace if the metal disc is exposed. ☐

10. Check the connections of the round poles to the upper and lower rope. ☐

Structural stability

11. Uncover the foundation once a year in order to check for rot or the steel feet for corrosion. ☐

	Proof of maintenance	Special notes, e.g. for repairs
Repair not carried out, it is still possible to play on equipment	☐	
Repair not carried out, equipment is taken out of action	☐	
All work carried out, everything is in order	☐	
Maintenance carried out by:		

.. Date ....

Spare Parts
Small Acrobat Rig
Order No. L7.66000
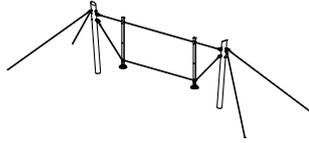
Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.
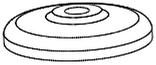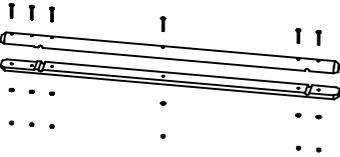
Order No.	Spare part	
0.94113	**pendulum seat without disc**	
99.01253	**round pole** **slotted and pre-drilled**	
99.01327	**suspension gear, complete** **without square block steel**	